

**AUFBAUANLEITUNG**

**INSTRUCTIONS MANUAL**


**LA INSTRUCCIÓN**

**INTRODUZIONE**

**TALIMATLAR**

**INSTRUÇÕES**

**تاميلعت**

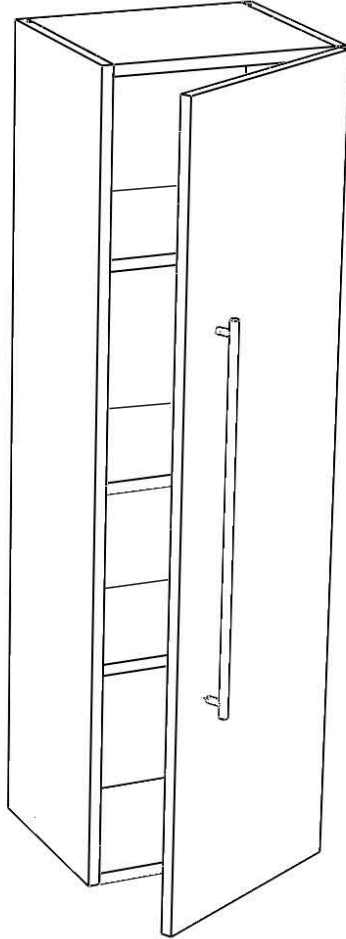



12x  
WA 020




12x  
WA 021



8x  
WA 022




2x  
WA 023




4x  
WA 029




6x  
WA 030



2x  
WA 031



2x  
WA 032




2x  
WA 033



8x  
WA 034




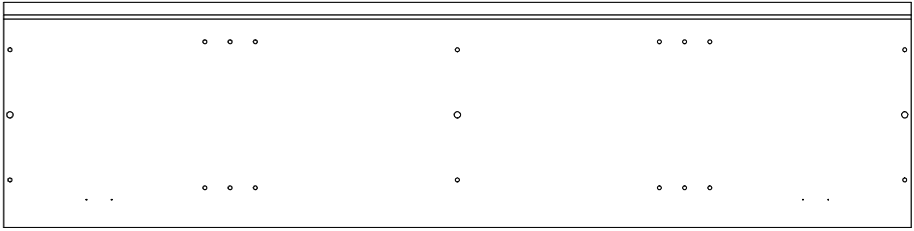


2x  
HS 300



1x  
HS 301

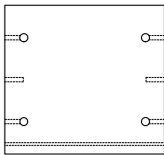

2x  
HS 302

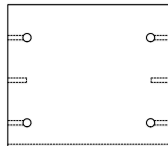


1x  
HS 303



2x  
HS 304




1x  
HS 305




1x  
HS 306

12x

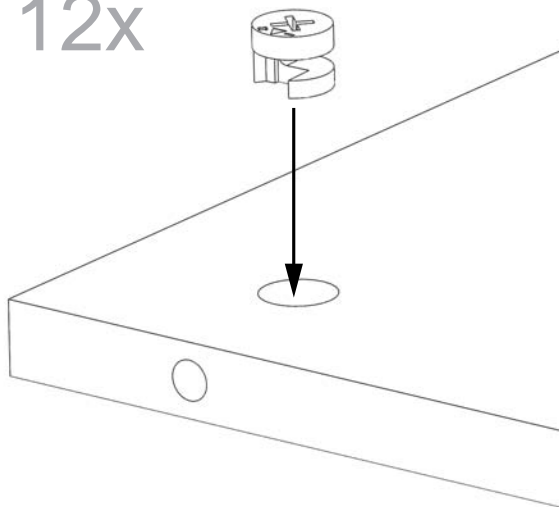




!

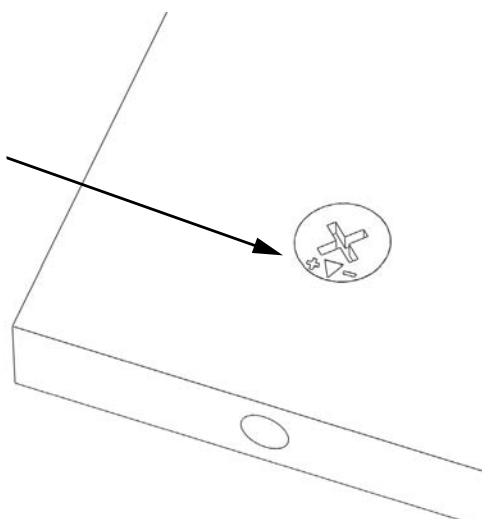



12x

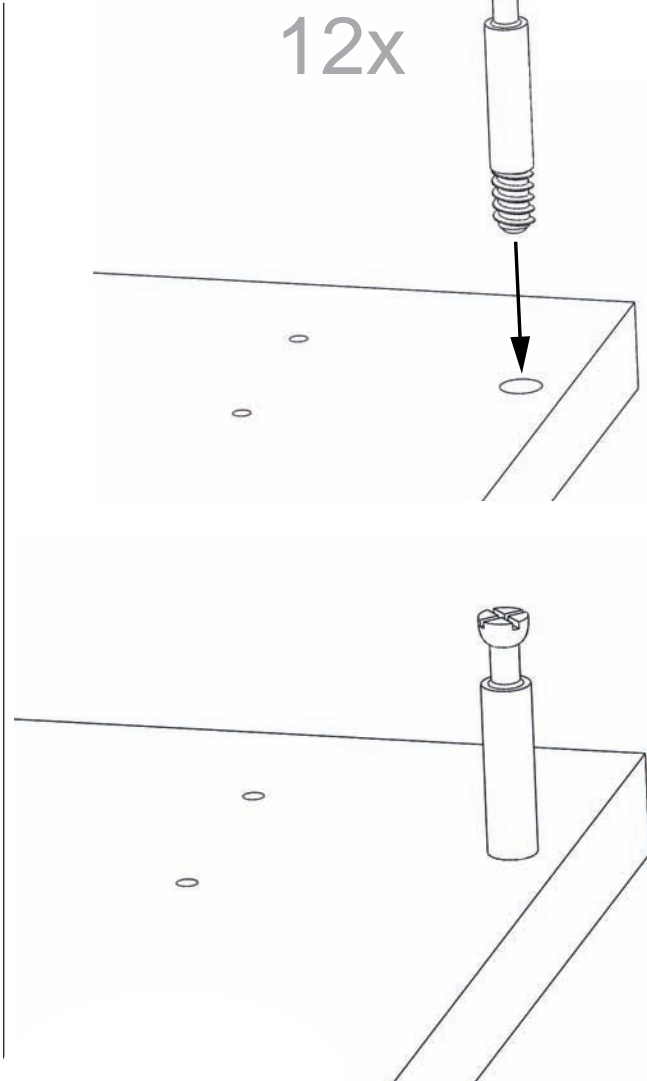

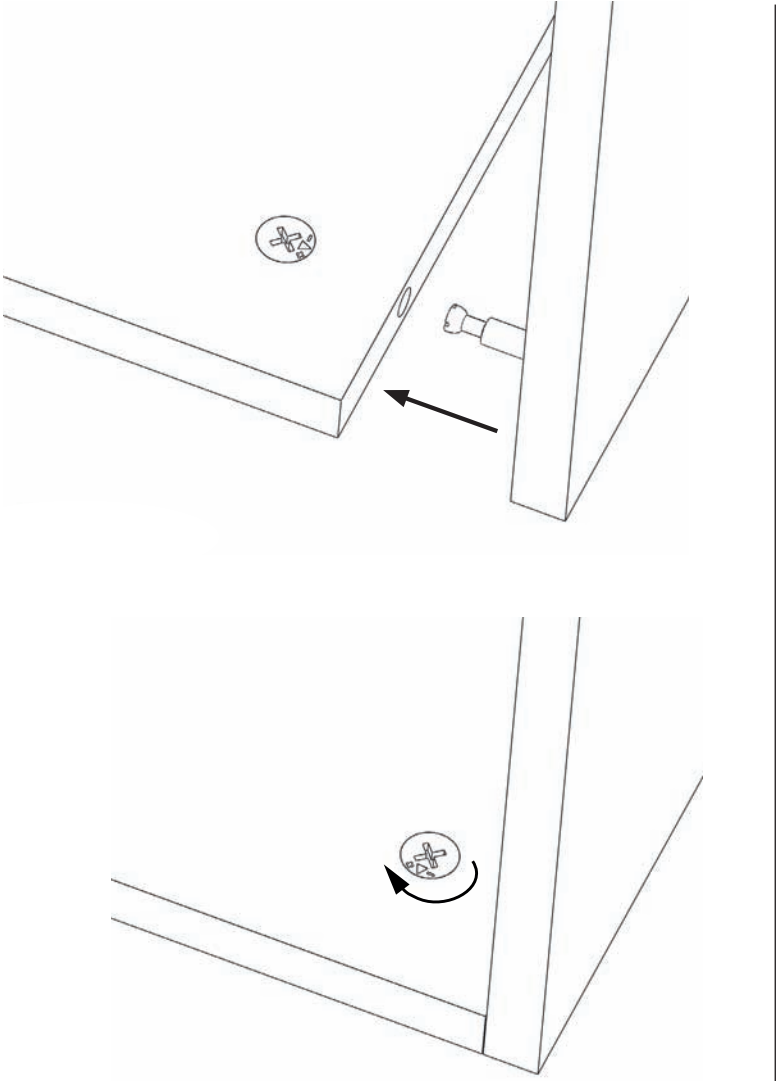

ZUSAMMENBAU

ASSEMBLY

ASSEMBLAGE

ASAMBLEA

MONTAJ

MONTAGEM


تجميع




6x  
WA 021



3x  
WA 030

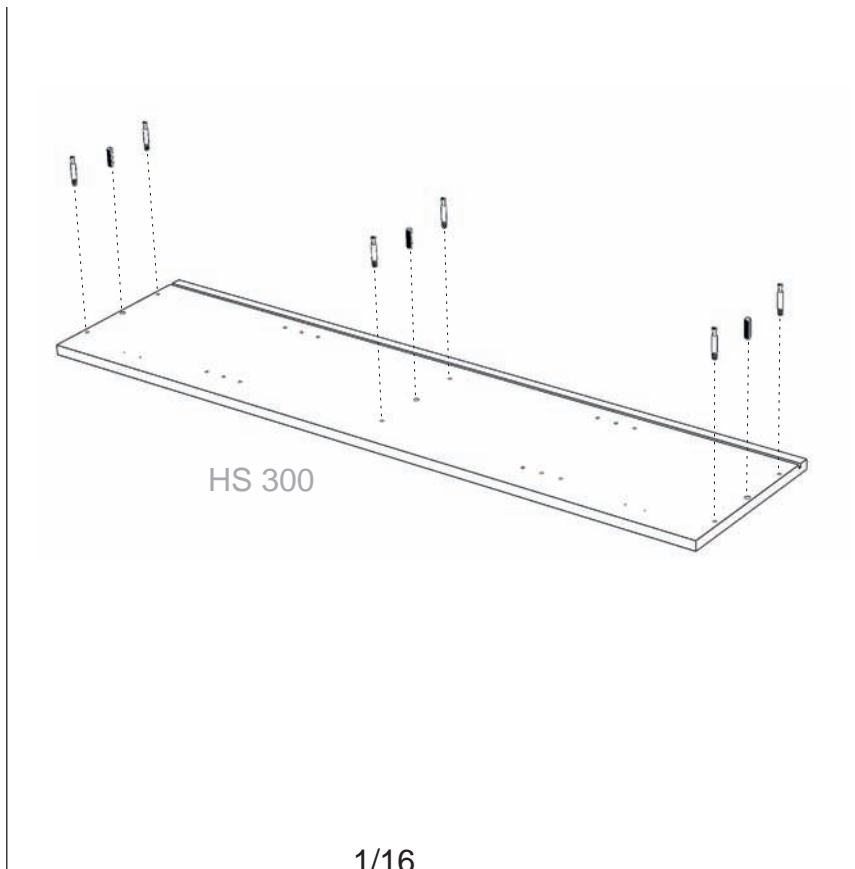


HS 302

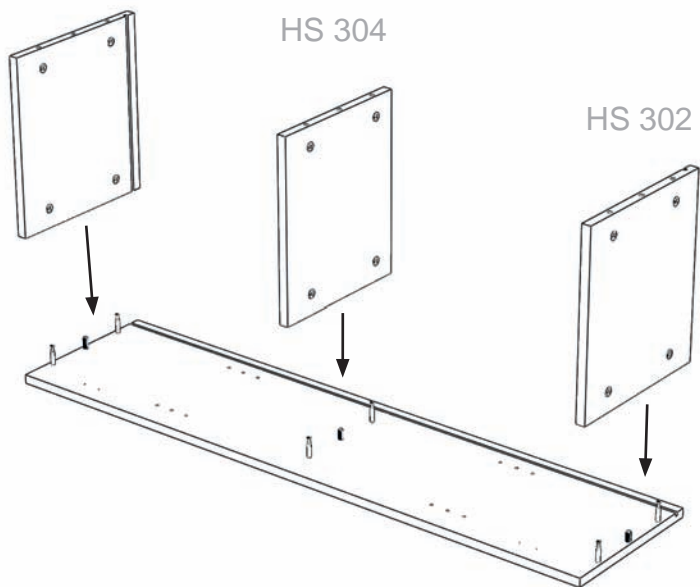

2/16



12x  
WA 020

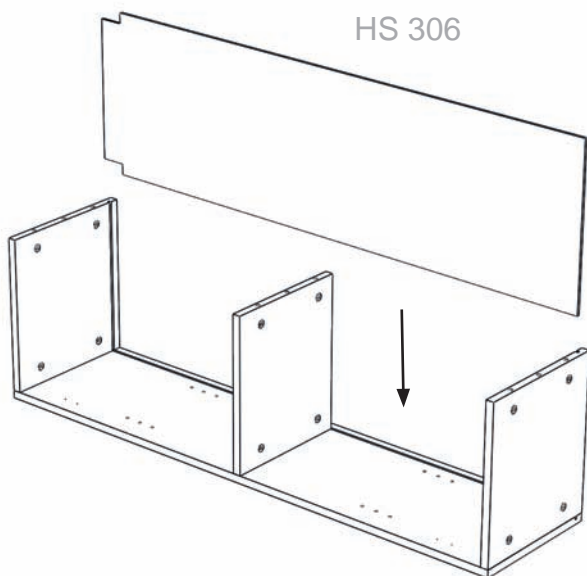

3/16




6x  
WA 021





3x  
WA 030


HS 300

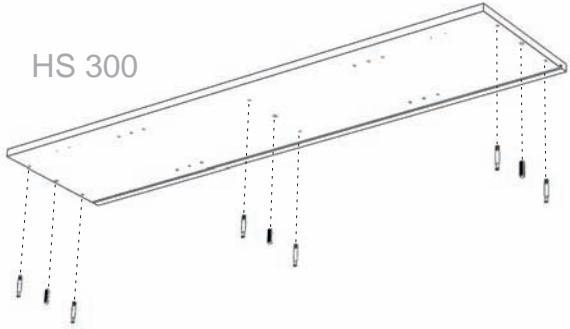




4/16

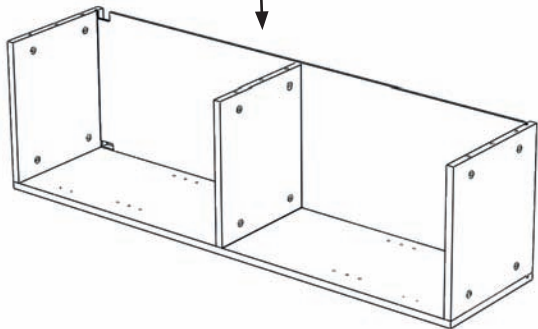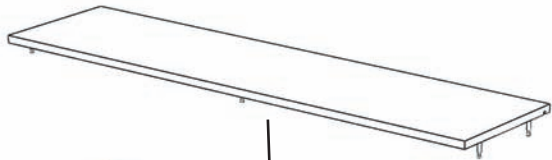


5/16

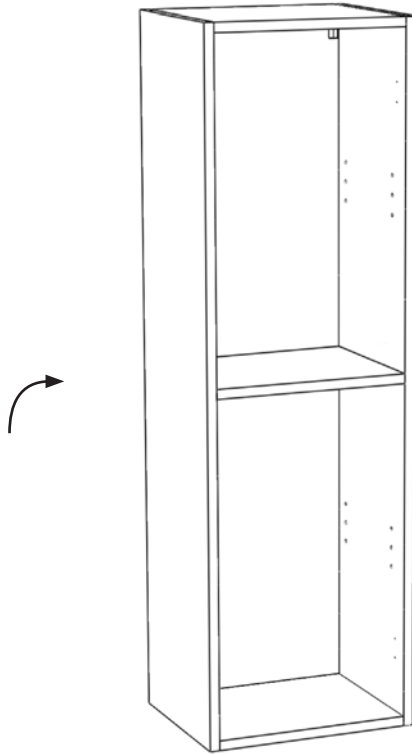

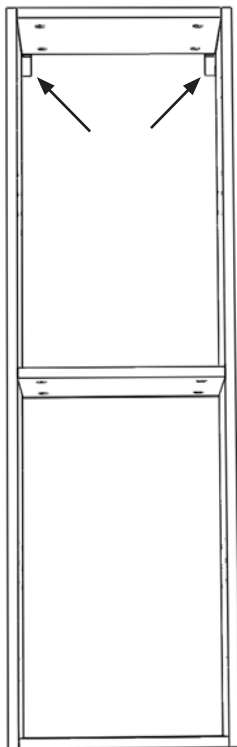


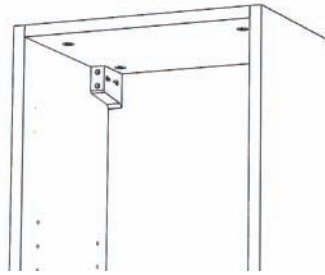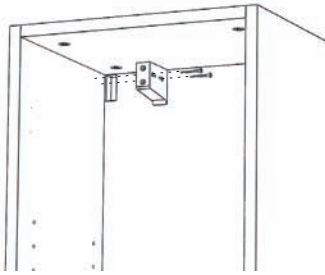



6/16



4x  
WA 029






2x  
WA 032

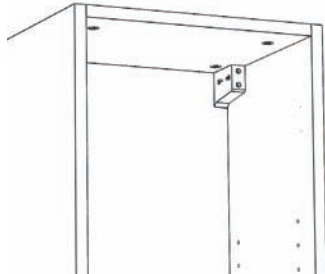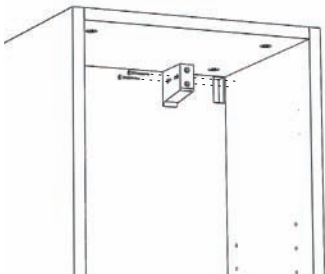


7/16


WANDMONTAGE  
WALL MOUNT  
MONTAGE AU MUR  
DE MONTAJE EN PARED  
DUVARA MONTAJ  
PAREDE MONTAGEM

لجج رادج





2x  
WA 033

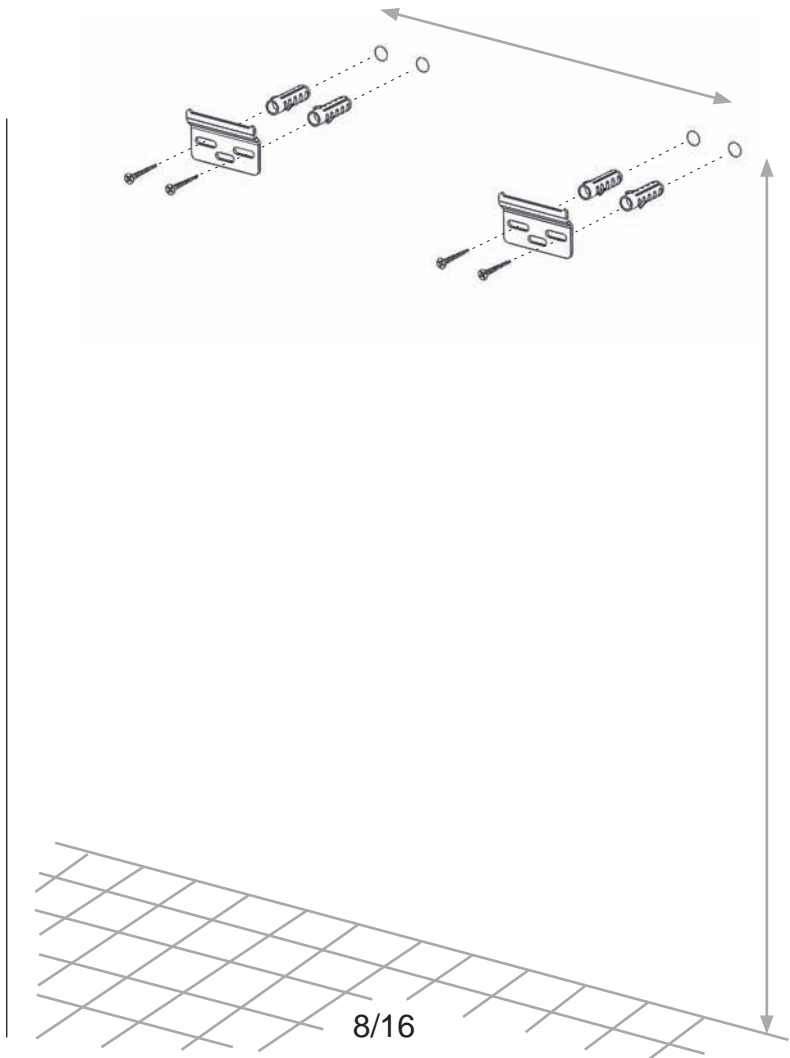

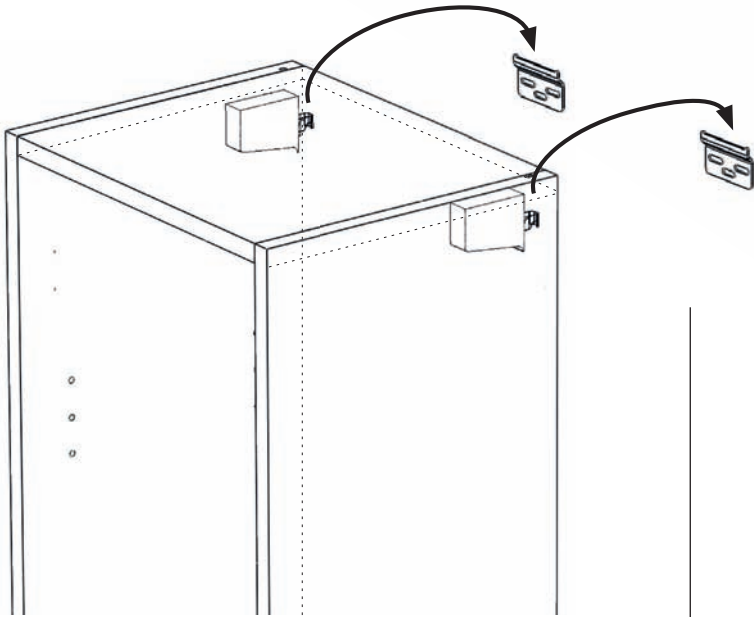


9/16

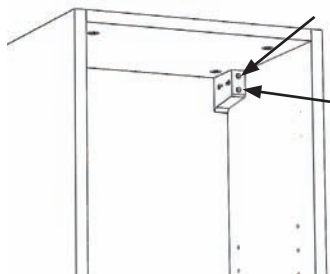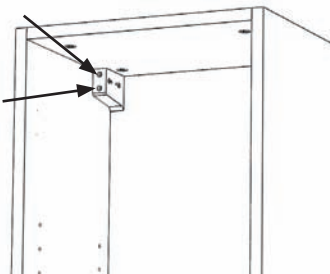


10/16








4x  
WA 034

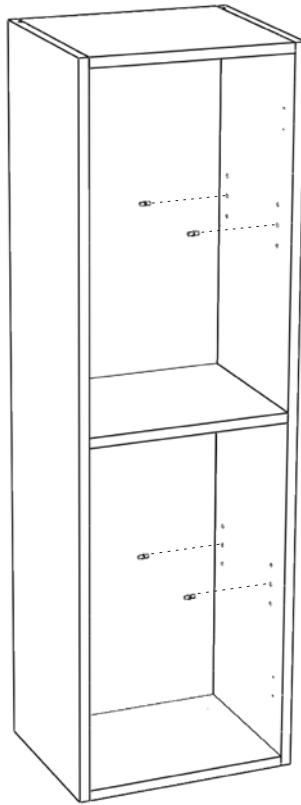

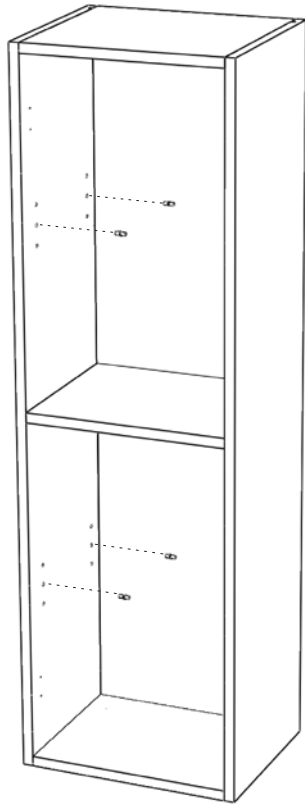


4x  
WA 034

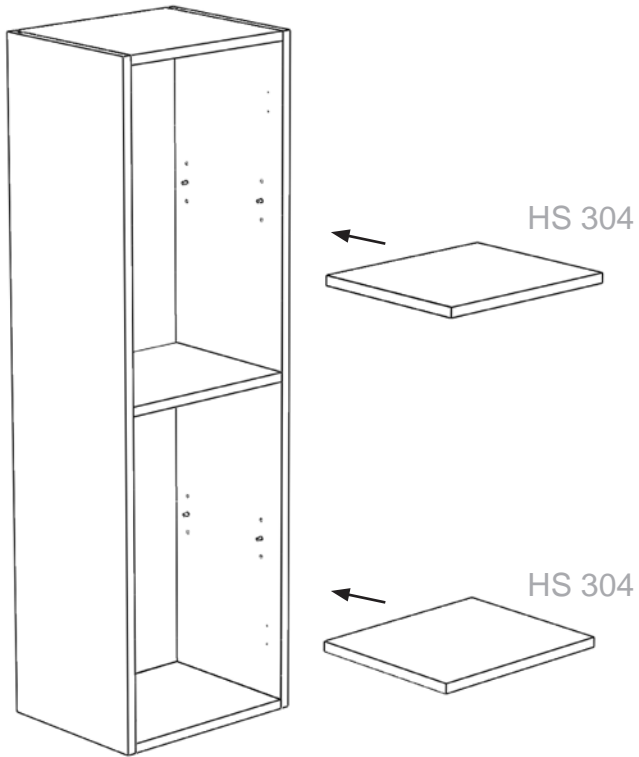


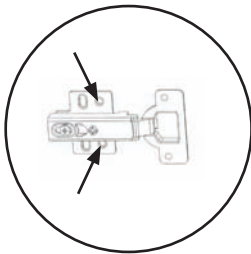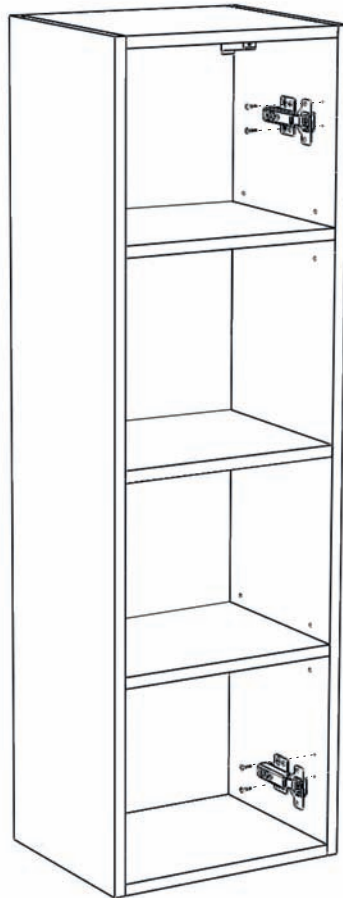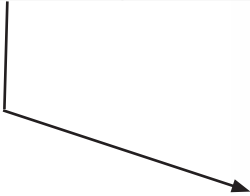



4x  
WA 022




2x  
WA 031

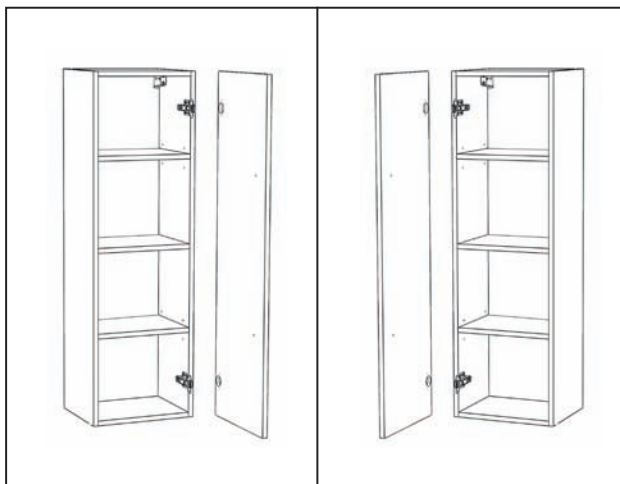



4x  
WA 022

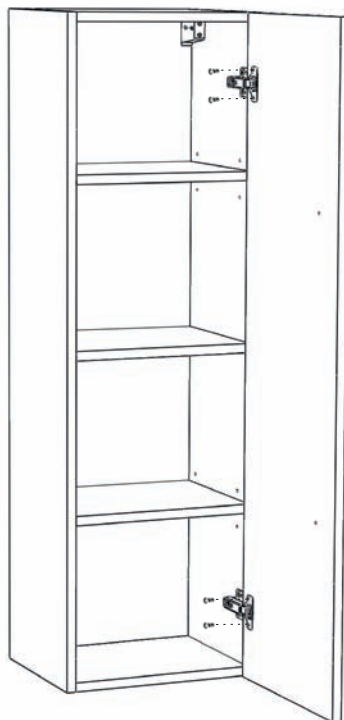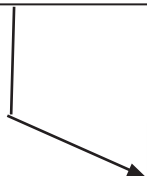

HS 301

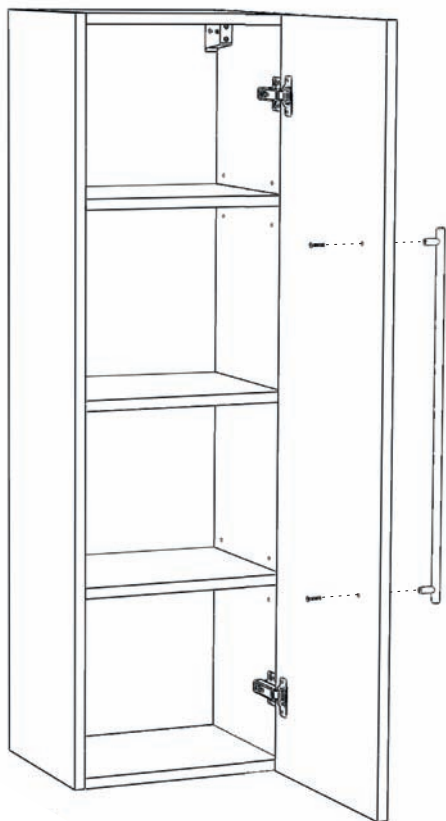

HS 305



2x  
WA 023

